



FISKARS

# Embossing border punch

## How to use

Start with your punch on a craft mat to make sure you don't scratch your table. Start in the middle (for perfectly centered borders). Center your paper on the punch and slide it into the punch flush to the back and punch—**don't let up or move your paper!** Give it an extra push or two down for a crisp embossed design. This extra little push is the key, trust us.

**Don't pull the paper out!** Slide it to the left keeping it flush to the back until the newly punched pattern lines up with the printed pattern on the base and punch again. Repeat on both sides of your center punch until you complete your border.

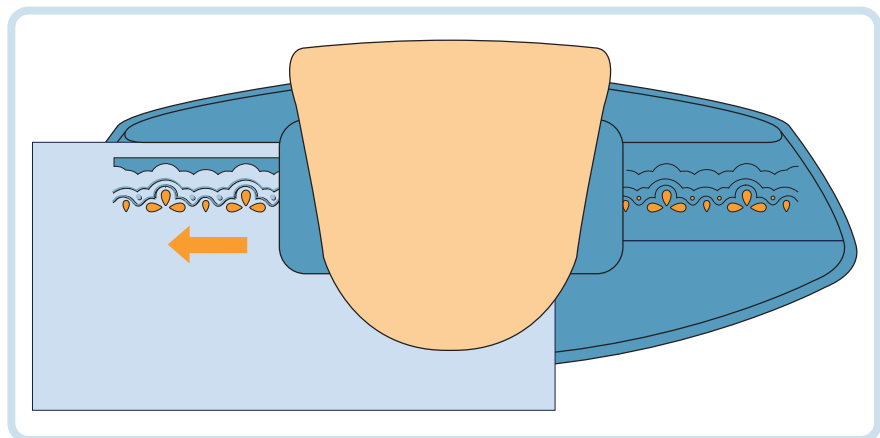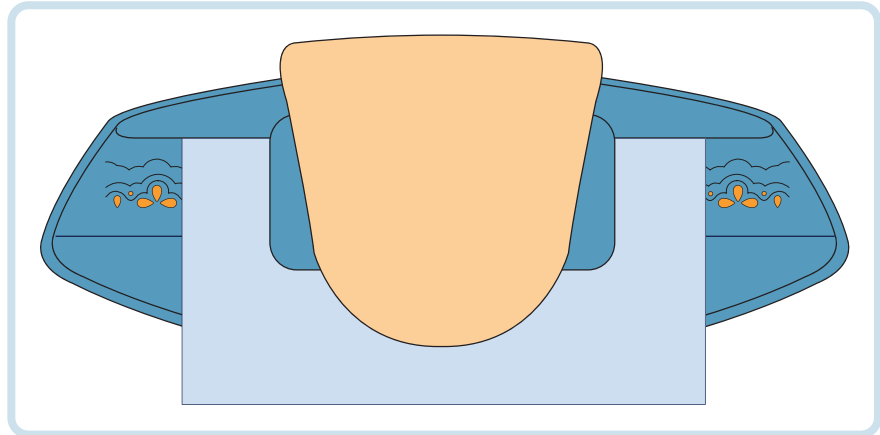

[www.fiskars.com](http://www.fiskars.com)

This punch can be used on heavy card stock, but we recommend 65 lb. card stock to get the best results.