

Instructions: Paper Crimper

The FISKARS logo is located in the top right corner of the page. It consists of the word "FISKARS" in a bold, white, sans-serif font, set against a black, rounded rectangular background. A registered trademark symbol (®) is positioned to the upper right of the word.

Directions: Simply insert edge of paper between Crimper rollers, lightly squeeze handle to grip paper, and rotate turn key in a clockwise direction. For the straightest and tightest crimp place index finger at the top of the handle and firmly squeeze handle while crimping.